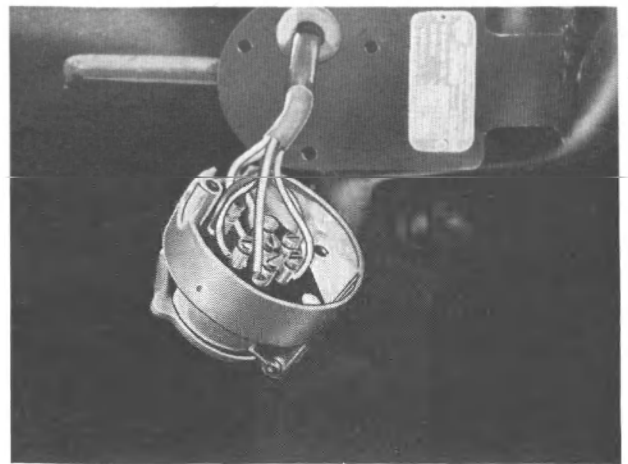



Pass cables through, connect to socket and fasten socket on towbar.

Make quite sure that the plug connections agree with those in the socket. When attaching a trailer, check correct operation of trailer lighting.

[illegible]


- 6 Fuse box (as from 1971 model:
connection to outlet 8)
7 Oil pressure telltale switch
8 Front loom section with oil pressure telltale lead

Wiring diagram for trailer coupling – 73 models onwards

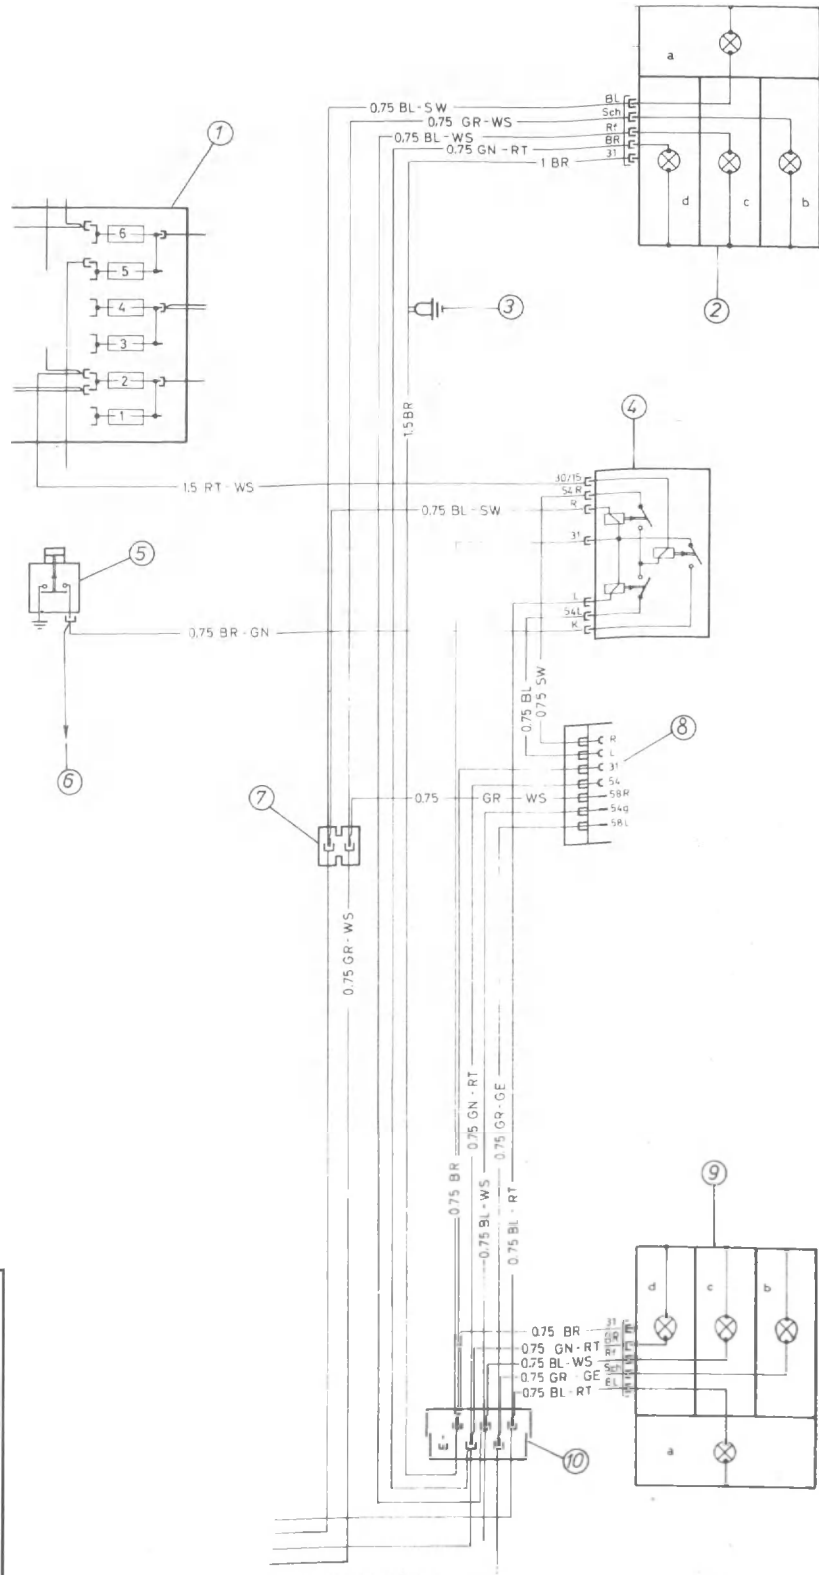

Color codes:

BL = blue	a) = Turn indicator
BR = brown	b) = Rear light
GE = yellow	c) = Reversing light
GN = green	d) = Brake light
RT = red	
SW = black	
WS = white	

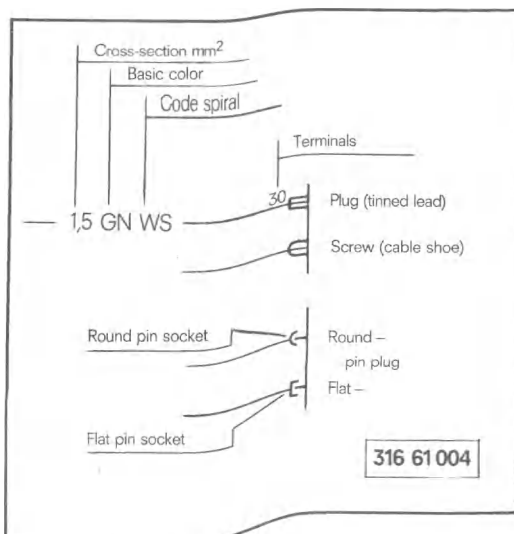

- | | |
|--------------------------|----------------------------|
| 1) Fuse box | 6) Oil pressure telltale |
| 2) Right rear light | 7) Right rear light plug |
| 3) Earth (ground) | 8) Trailer coupling socket |
| 4) Trailer control relay | 9) Left rear light |
| 5) Oil pressure contact | 10) Left rear light plug |