



SECTION 4 UNDERCARRIAGE


Group 7 Track

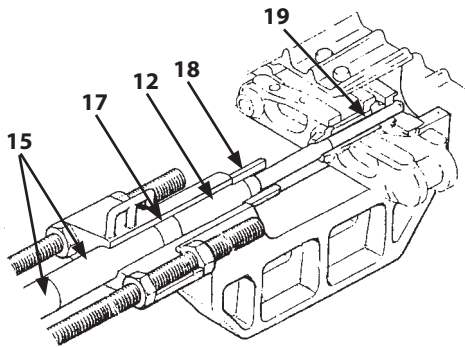

W1J7-03-07-006

14. Remove extension (15), pilot (17), pusher (12), and guide (18) from special tool (ST 1532) for removal / installation of master pin.
15. Remove hoses (d) (2 used) of electric pump (ST 1531) from hydraulic cylinder (8). Disassemble special tool (ST 1532) for removal / installation of master pin in the reverse way as assembly procedures on W4-7-1-4 when disassembling and keeping it.

 **NOTE:** Put the matching marks on screw (9) and nut (10) for assembly before removing nuts (10) (2 used) from screws (9) (2 used).

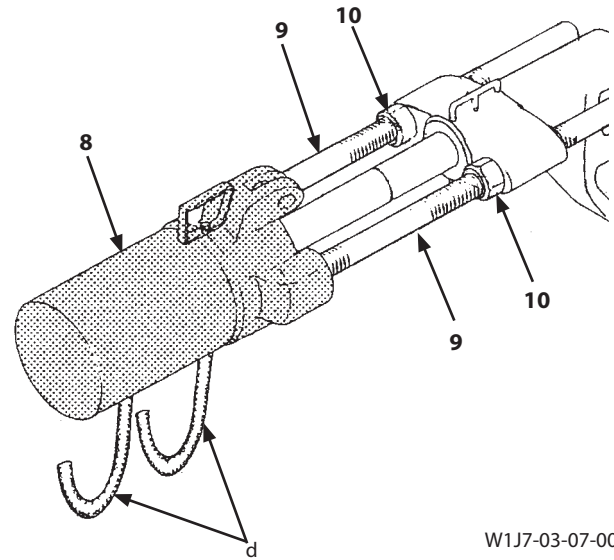

d - Hose

W1J7-03-07-005

MEMO
