

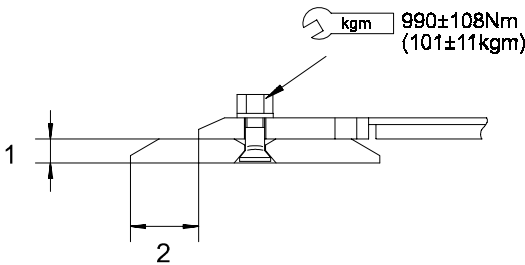
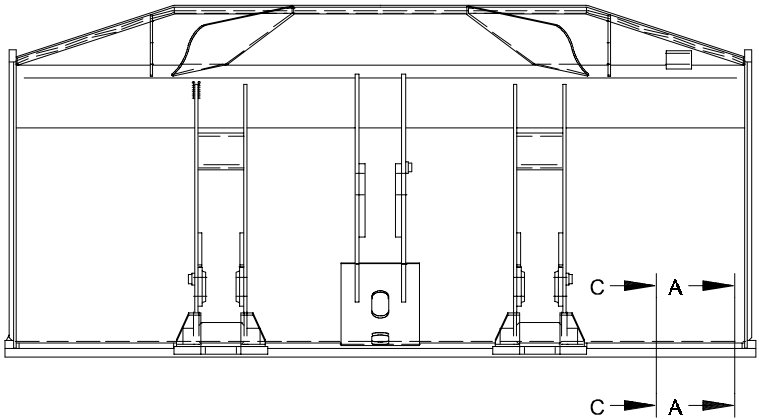


BUCKET

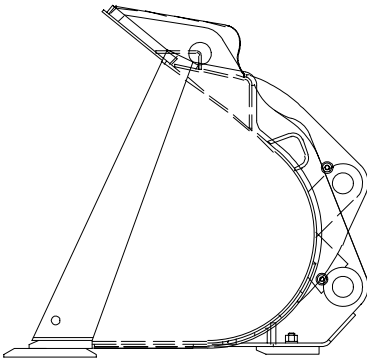


A - A

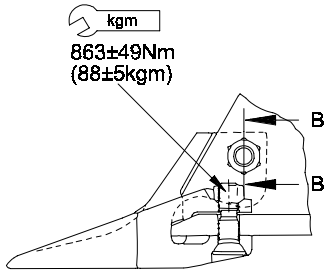

A - A



B - B

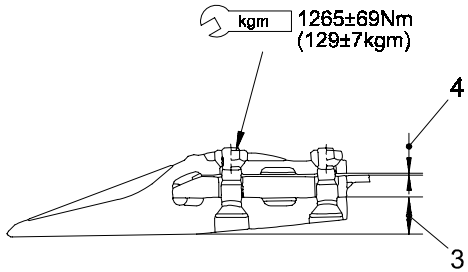

C - C

SAW00778


Unit: mm

No.	Check item	Criteria			Remedy
1	Wear of cutting edge (thickness)	Standard size		Repair limit	Replace
		31.8		19	
2	Wear of cutting edge (length)	90		5	
3	Wear of bucket tooth	Standard size	Tolerance	Repair limit	
		37	—	21	
4	Clearance at bucket tooth mount	0.54 (Max.)			

041903

BUCKET POSITIONER AND BOOM KICK-OUT

041903

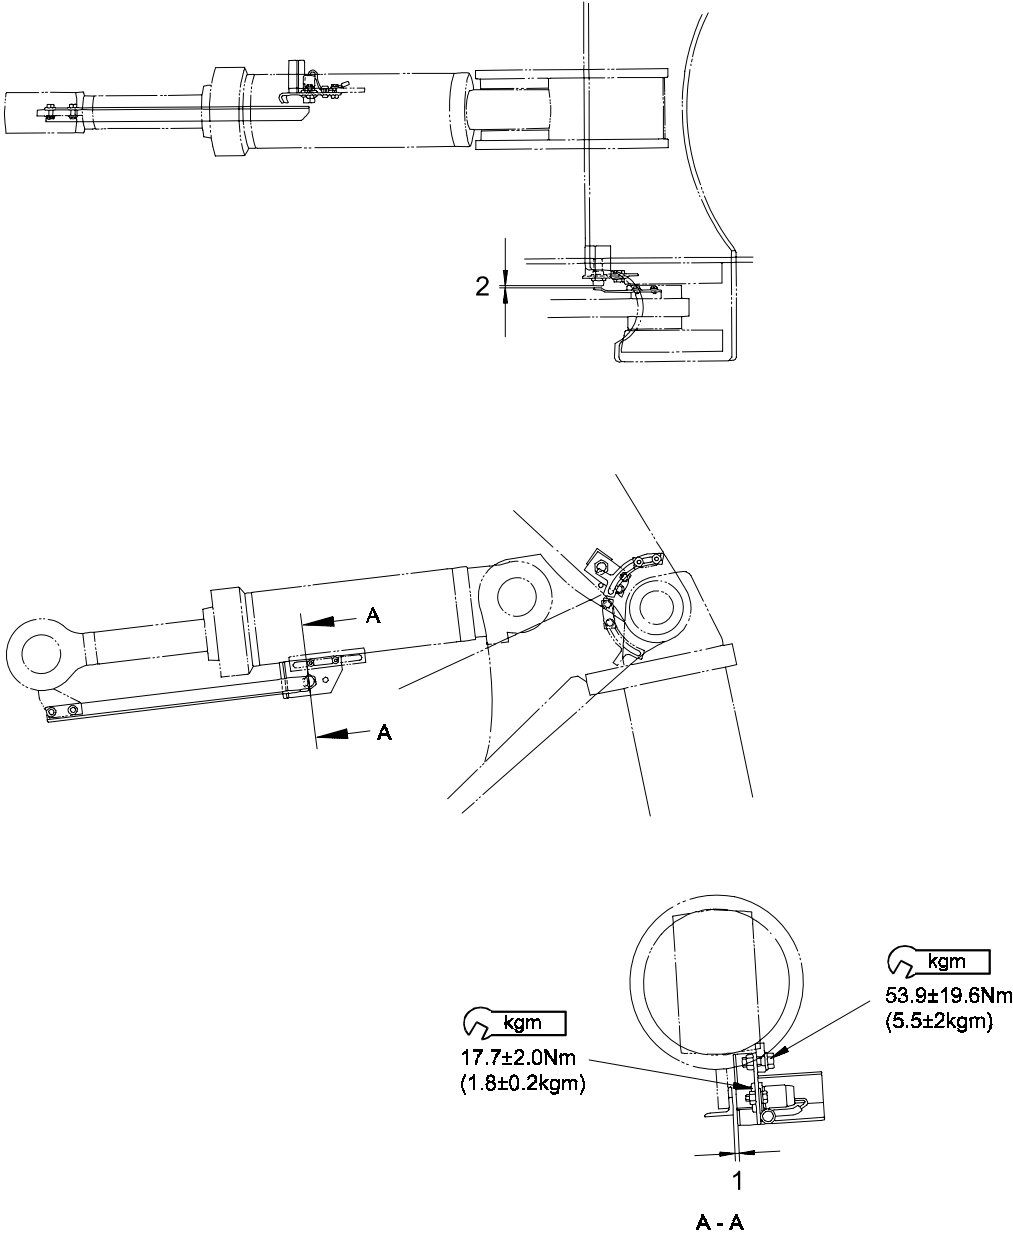

SBW00679

Unit: mm			
No.	Check item	Criteria	Remedy
1	Clearance at bucket positioner switch	3 – 5	Adjust
2	Clearance at boom kickout switch	3 – 5	