

C-Pillar Trim Panel - Upper**Removal and Installation**

1. Remove the lower C-pillar trim panel. For additional information, refer to C-Pillar Trim Panel - Lower in this section.
2. **NOTE:** The seatback has been removed for clarity. The screw is accessible with the seatback in place.

Remove the upper C-pillar trim panel retainer screw.


- To install, tighten to 10 Nm (89 lb-in).

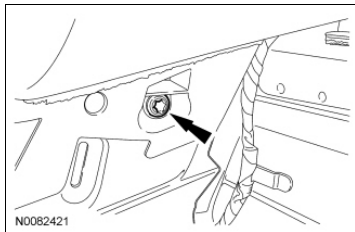

3. **NOTE:** The seatback has been removed for clarity.


Remove the upper C-pillar trim panel.

- Pull towards seat to detach clips.

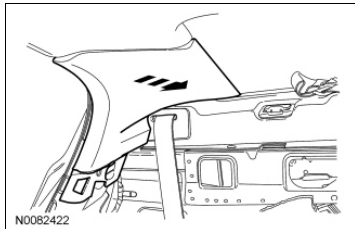

4. **NOTICE:** To avoid damage to the upper C-pillar trim panel, remove any retaining clips from the body and attach them to the upper C-pillar trim panel before installing.

To install, reverse the removal procedure.

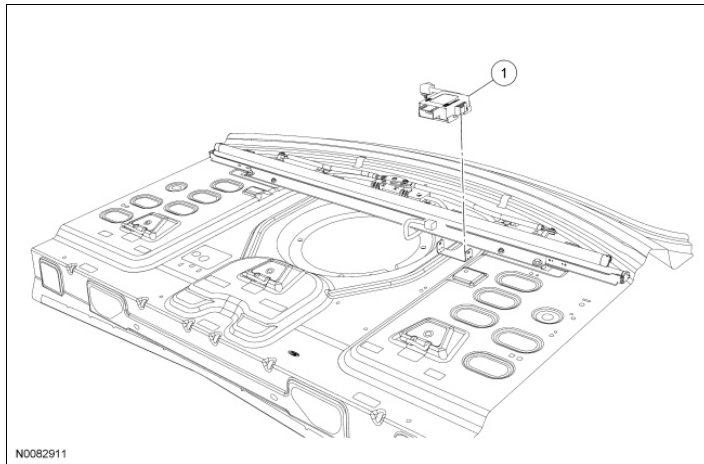SECTION 501-05: Interior Trim and Ornamentation
REMOVAL AND INSTALLATION2013 MKS Workshop Manual
Procedure revision date: 02/14/2012**Sunshade Module**

Item	Part Number	Description
1	14D590	Sunshade module


Removal and Installation

1. Remove the rear seat. For additional information, refer to [Section 501-10](#).
2. Remove the parcel shelf. For additional information, refer to [Parcel Shelf](#) in this section.
3. Disconnect the sunshade module electrical connector.
4. Press the tabs on the sunshade module to release the sunshade module from the sunshade module bracket.
5. To install, reverse the removal procedure.

SECTION 501-05: Interior Trim and Ornamentation
REMOVAL AND INSTALLATION

2013 MKS Workshop Manual
Procedure revision date: 02/14/2012

Door Trim Panel - Front

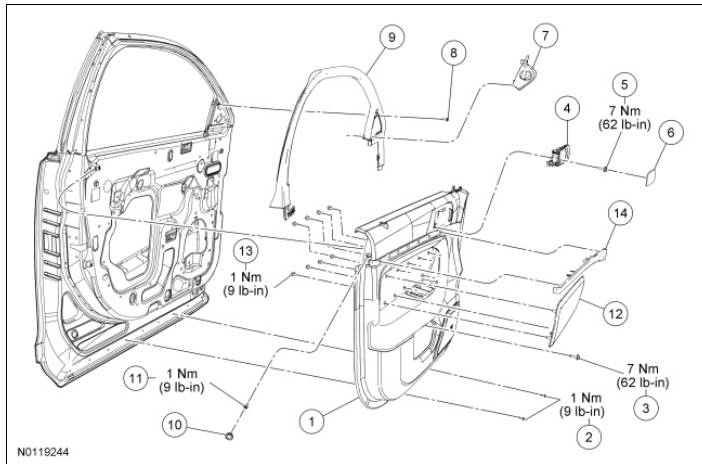

Item	Part Number	Description
1	23943 LH/ 23942 RH	Front door trim panel
2	W708392	Front door trim panel lower screw (2 required)
3	W505424	Front door trim panel center bolt
4	22601 LH/ 22600 RH	Front door inside door handle assembly
5	W505424	Front door inside door handle assembly bolt
6	22621 LH/ 22620 RH	Front door inside door handle assembly bolt cover
7	17A703 LH/ 17D720 RH	Front door sail panel
8	W709996	Window garnish moulding screw
9	5420905 LH/ 5420904 RH	Window garnish moulding
10	219B00	Front door trim panel grommet
11	W715481	Front door trim panel rear screw
12	221A19 LH/ 221A18 RH	Front door wood trim panel insert
13	-	Front door wood trim panel insert screw (part of 221A19 LH/221A18 RH)
14	239A01 LH/ 239A00 RH	Front door tnel applique

Removal and Installation

All trim panels

1. Pull outward and remove the sail panel.
 - If equipped, disconnect the electrical connector.
2. Remove the front door inside handle assembly bolt cover.

3. Remove the front door inside door handle assembly bolt.
 - To install, tighten to 7 Nm (62 lb-in).
4. Remove the front door trim panel center bolt.
 - To install, tighten to 7 Nm (62 lb-in).
5. Remove the trim panel grommet and remove the front door trim panel rear screw.
 - To install, tighten to 1 Nm (9 lb-in).
6. Remove the front door trim panel lower screws.
7. **NOTICE: Avoid pulling directly on the upper rear corner (vinyl portion) of the door trim panel during removal to prevent damage to the door trim panel.**

Remove the front door trim panel.

- Pull the front door trim panel outward to release the retaining clips.
- Disconnect the inside door handle cable.
- If equipped, disconnect the electrical connectors.


Window garnish moulding

8. Remove the window garnish moulding screw.
9. Remove the window garnish moulding.

All trim panels

10. **NOTICE: To avoid damage to the door trim panel, remove any retaining clips from the body and attach them to the door trim panel.**

To install, reverse the removal procedure.

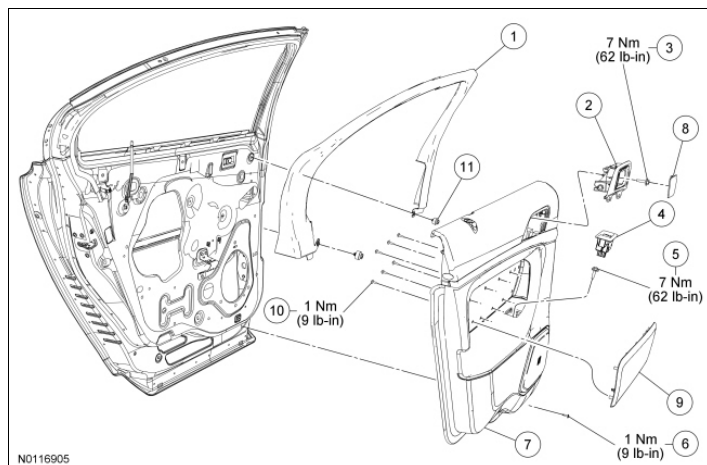Door Trim Panel - Rear**NOTE:** RH shown, LH similar.

Item	Part Number	Description
1	5425514 RH/ 5425515 LH	Rear door window garnish moulding
2	54266B34 RH/ 54266B35 LH	Rear door inside handle assembly
3	W505424	Rear door handle assembly bolt
4	54237W20 RH/ 54237W21 LH	Rear door window control switch assembly
5	W505424	Rear door trim panel center bolt
6	W708392	Rear door trim panel lower screw
7	5427406 RH/ 5427407 LH	Rear door trim panel
8	5422621AB	Rear door inside handle assembly bolt cover
9	54221A19 LH/ 54221A18 RH	Rear door wood trim panel insert
10	-	Rear door wood trim panel insert screw (part of 221A19 LH/221A18 RH)
11	W713673	Rear door window garnish moulding retainer (2 required)

Removal and Installation**Lower door trim panel**

1. Remove the rear door inside handle assembly bolt cover.

move the rear door inside handle assembly bolt.

- To install, tighten to 7 Nm (62 lb-in).

3. Using a suitable prying tool, pry upward to remove the window control switch.


4. Remove the rear door trim panel center bolt.
 - To install, tighten to 7 Nm (62 lb-in).
5. Remove the rear door trim panel lower screw.
 - To install, tighten to (1 Nm (9 In-lb).
6. **NOTICE:** Avoid pulling directly on the upper rear corner (vinyl portion) of the door trim panel during removal to prevent damage to the door trim panel.

Remove the rear door trim panel.


- Pull the rear door trim outward to release the retaining clips.
- Remove the rear door handle assembly and disconnect the rear door handle assembly cable.
- If equipped, disconnect the electrical connectors.

Window garnish moulding

7. Disengage the window garnish moulding from the front retainer stud.

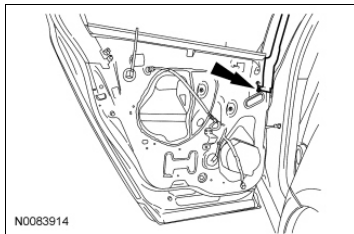

8. Disengage the window garnish moulding from the rear retainer stud.

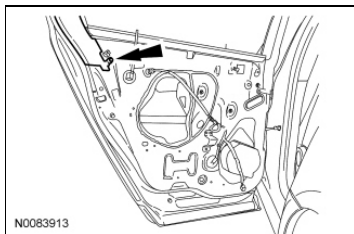


9. Remove the window garnish moulding.

All door trim panels

10. **NOTICE:** To avoid damage to the rear door trim panel, remove any retaining clips from the body and attach them to the rear door trim panel before installing.


To install, reverse the removal procedure.

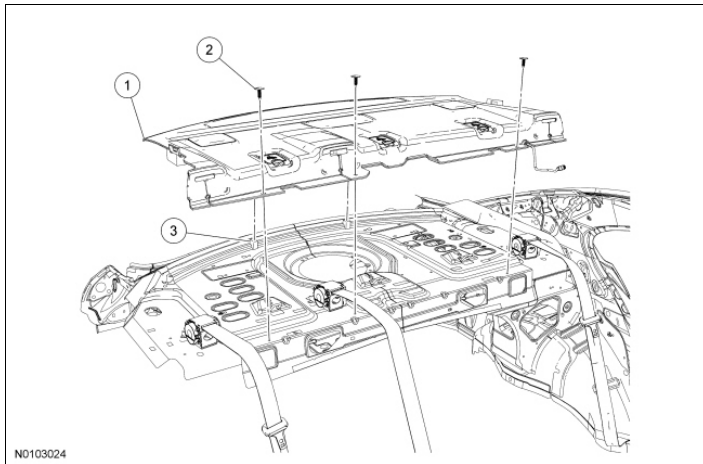Parcel Shelf


Item	Part Number	Description
1	46668	Parcel shelf
2	W706635	Parcel shelf pin-type retainer
3	54466A10	Parcel shelf support

Removal and Installation

1. Remove the rear seat backrest. For additional information, refer to [Section 501-10](#).
2. Remove the quarter window trim panel. For additional information, refer to [C-Pillar Trim Panel - Upper](#) in this section.
3. Remove the parcel shelf pin-type retainers.

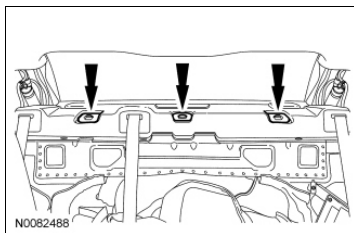


4. Disconnect the rear speaker electrical connector.

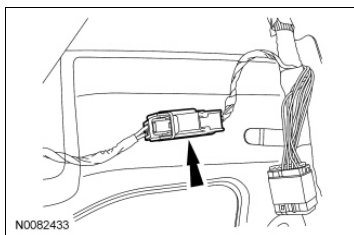

5. **NOTE:** During installation, make sure that the foam blocks on the parcel shelf are engaged on the sunshade tabs. RH side shown LH side similar.

Remove the parcel shelf.

- Pull towards the front of the vehicle to release the parcel shelf clips.

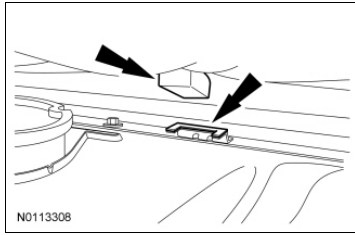

6. To install, reverse the removal procedure.
-