

R 17560 SWITCH HARNESS CONNECTIONS

CAB HARNESS CONNECTIONS

Fig. 15-Connections at Electrical Load Center

Circuit No.	Breaker Capacity	Circuit Used
1	20 amps	Accessory circuit and cab relay control circuit
2	20 amps	Lighting circuit
3	20 amps	Lighting circuit
4	20 amps	Cab blower fan motors, dome lamp wiper, and condenser relay control circuit.
5	20 amps	Ignition circuit
6	10 amps	Condenser fan motors and compressor clutch
7	30 amps	

**BATTERY CONNECTIONS**

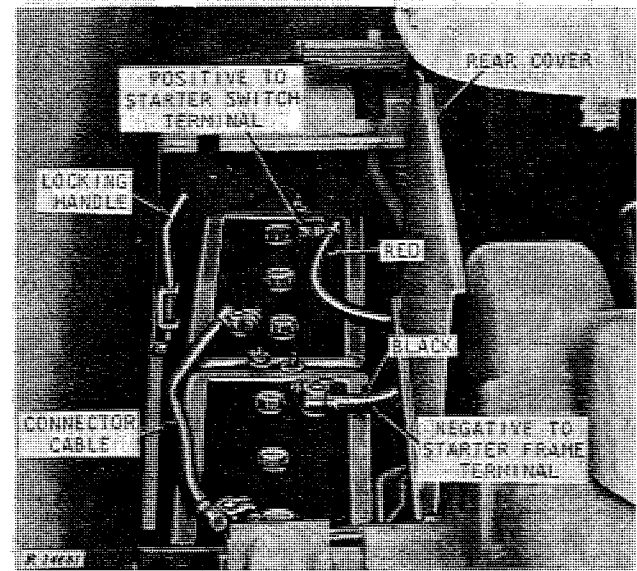


Fig. 16-Battery Connections