


Remove and Install Windshield

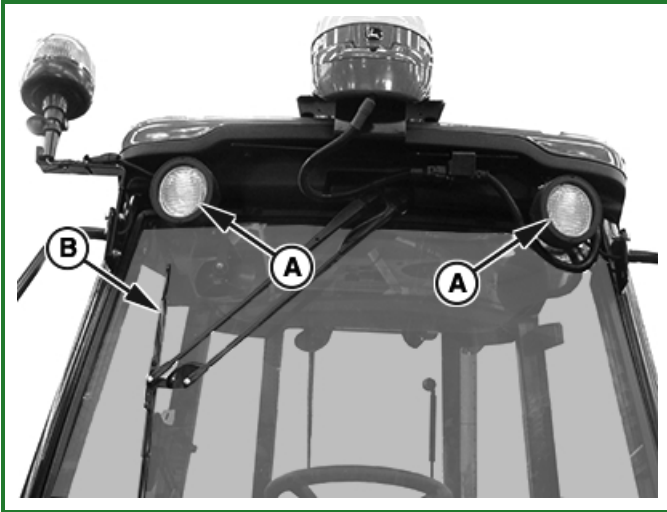

PY46209-UN: .

LEGEND:

A - Work Light


B - Windshield Wiper

1. Rotate cab work lights (A) out of the way.
2. Pull windshield wiper (B) out of the way and tie off.

IMPORTANT:

Support windshield to prevent it from falling when both lower mounts are removed.

3.

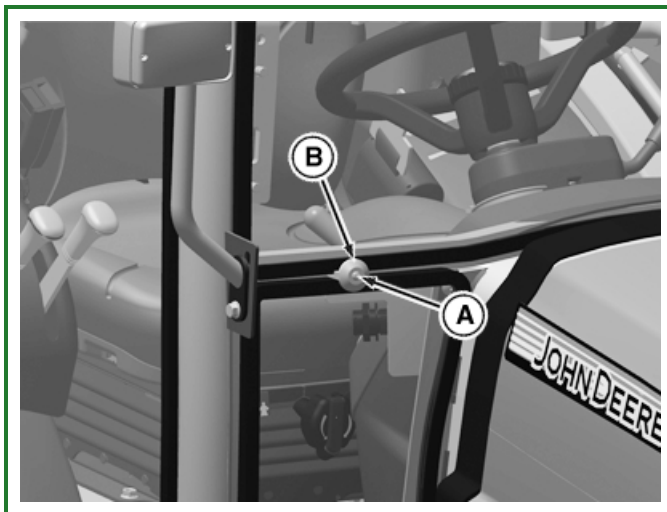

PY39348-UN: .

LEGEND:

A - Screw (2 used)

B - Lower Mount (2 used)

Remove screws (A) and lower mounts (B) from left and right-hand side

4. Remove windshield by pulling down and out, away from upper retaining mounts.

NOTE:

While installing windshield, make sure front warning light wire connectors are out of the way.

5. Install front windshield lower mounts (B) and screws (A).
6. Release windshield wiper and reposition cab work lights.

Go to [Section_90:Group_25](#)

SM27053,00003EF-19-20170829