



Fitting instructions



Fav 700
FENDT 700 Vario
FENDT 800 Vario


Front power lift / General system
Front power lift

Instandsetzen
G

3. Hydraulic pipes (mounting procedure for the following chassis number range)


711	from 5160	to 8069
712	from 5447	to 8166 European version
712	from 5447	to 8000 North American version
714/716	from 6016	to 8000

Standard model

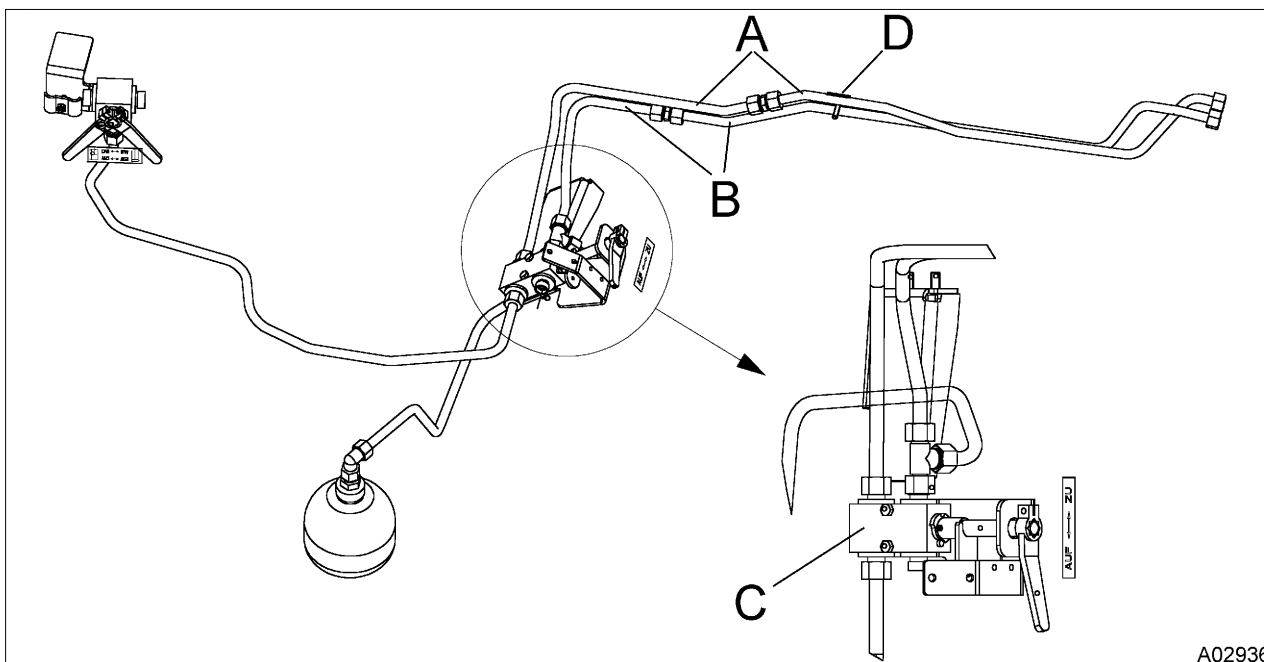

A02936

Enhanced-feature model

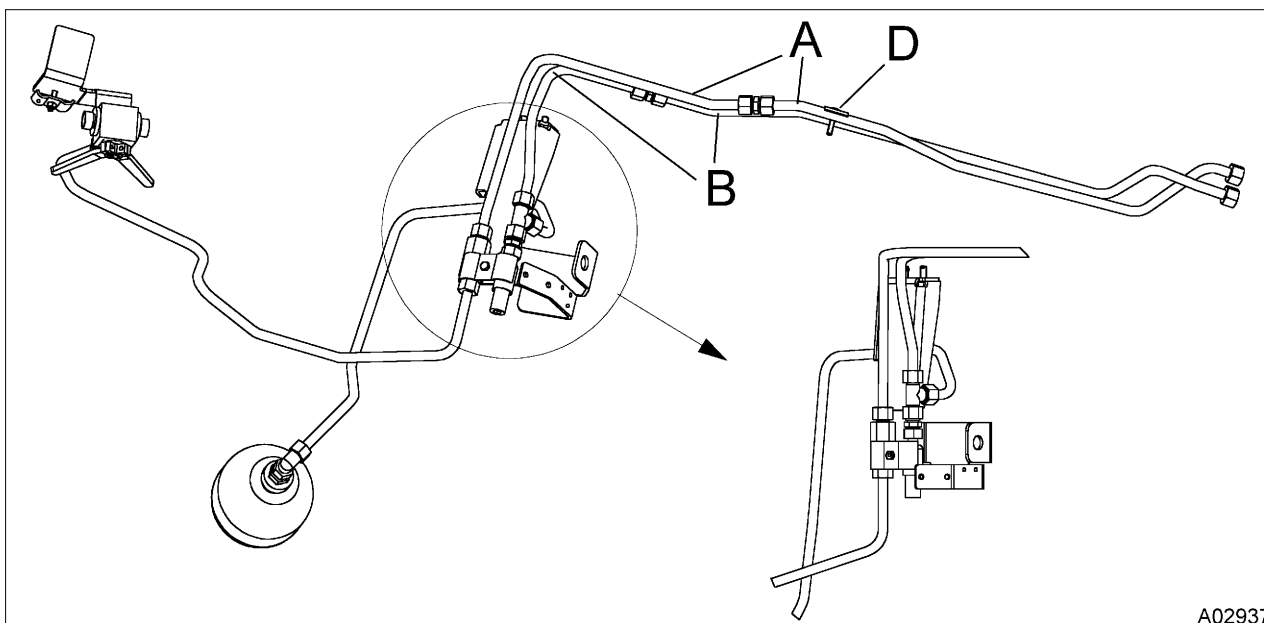

A02937

- The pressure pipes (A, B) must be fitted starting with chassis numbers 711 .. 1123, 712 .. 1214, 714 .. 2201, 716 .. 2374 and up. The pressure pipes are already fitted in tractors up to these chassis numbers.
- The standard version must be fitted with a ball valve (C).

Datum	Stand	Seite	Front power lift	Kapitelzahl	Reg.	Docu-No.
01.10.2003	a	3/17		9200	G	000004




Fitting instructions



Fav 700
FENDT 700 Vario
FENDT 800 Vario


Front power lift / General system
Front power lift

Instandsetzen
G

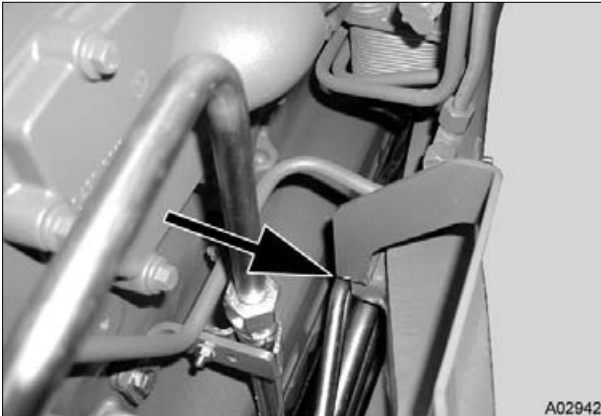


- Screw the pressure pipe on the inside of the frame with a pipe clip (arrowed) (also refer to D on the previous drawings).

1x M6x30 hexagon screw
1x spring washers6

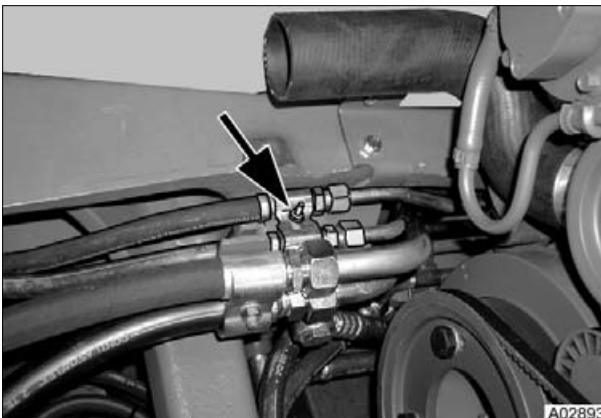

- Screw pressure hoses of front power lift to pressure pipes on frame.
- Fasten clip (arrowed) using hexagon nut and spring washer.

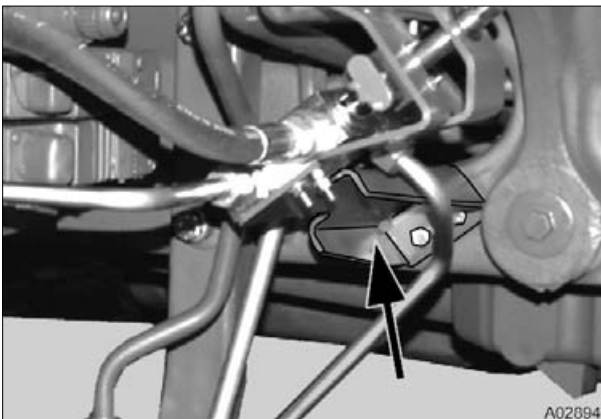

- Screw on bracket (arrowed) using M8x20 hexagon screws and spring washers.

Datum	Stand	Seite		Kapitelzahl	Reg.	Docu-No.
01.10.2003	a	4/17	Front power lift	9200	G	000004