

## Rear end

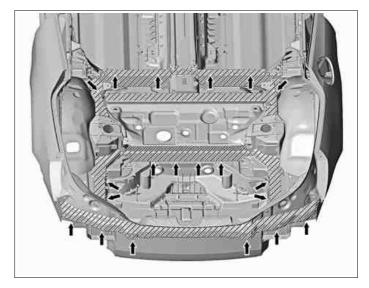


P97.20-2629-11

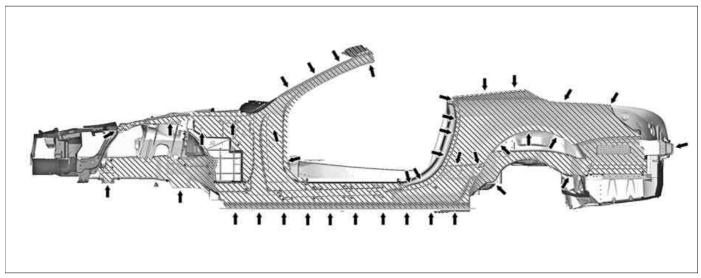

P97.20-2625-08

## Upper front longitudinal member, A-pillar, side wall paneling and lower side longitudinal member

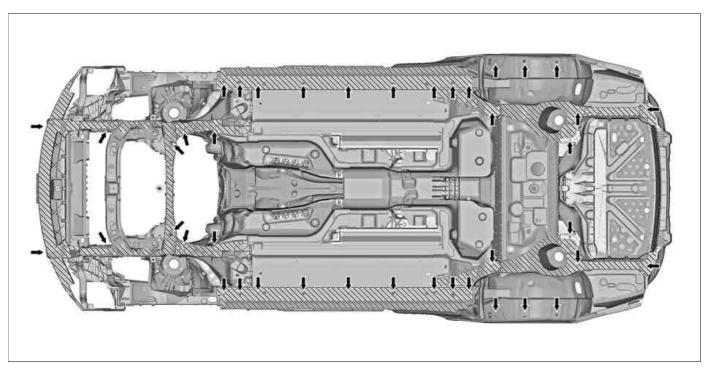

## Underfloor

Picture no., etc.	Work notes		
⚠ Danger!	Risk of explosion and poisoning caused by solvent vapors and gasses. Risk of injury to skin and eyes when working with anticorrosion agents		AS97.00-Z-0001-01A
<b>(</b> )	Notes on cavity preservation		AH97.20-P-0001-01B
A	Cavity preservation in crimping area	i Install from inside through openings (arrows) with hook probe. Apply cavity preservation with spraying hose and nozzle (spraying angle 360°) as far as possible into cavities.	
		Cavity preservation, solvent-free (1 I container)	*BR00.45-Z-1003-05A
В	Inner surface, cavities and gaps	i Uniformly moisten cavity preservation.	
		Cavity preservation, solvent-free (1 I container)	*BR00.45-Z-1003-05A

## Repair materials

Number	Designation	Order number
BR00.45-Z-1003-05A	Cavity preservation, solvent-free (1 I container)	A 000 986 72 70 05