

Hydraulic Reservoir

FIGS. 18–19: Disconnect the wiring to the oil level sensor (1) or (2).

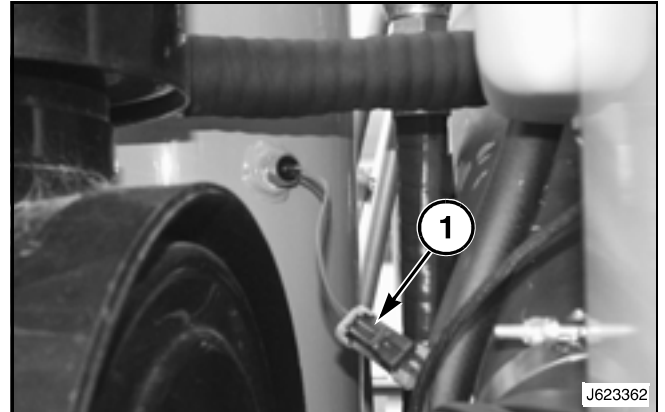


FIG. 18

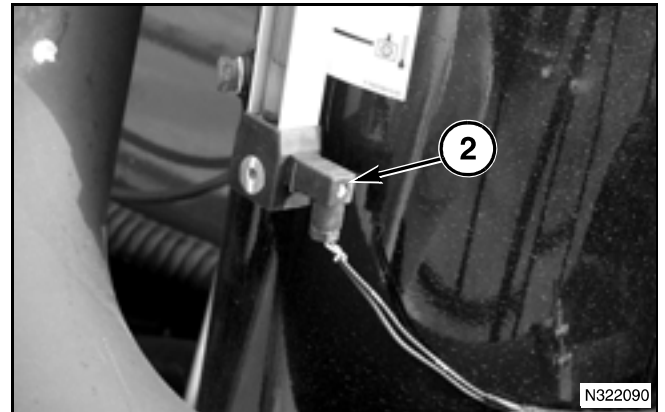


FIG. 19

FIGS. 20–21: Identify and mark the hydraulic lines to assist with assembly.

NOTE: Refer to the General section of the Hydraulic Reservoir to assist in identifying the hydraulic lines.

Remove the hydraulic lines from the hydraulic reservoir. Plug or cap the ends of the hydraulic lines and the ports to prevent contamination of the hydraulic system.

IMPORTANT: Cleanliness is essential when installing or servicing hydraulic components. When disconnecting hydraulic components, areas surrounding the connections should be steam cleaned or washed with solvent so that contamination will not enter the system. Always keep hoses, connections, and ports suitably capped or covered to keep contamination out of the system.

Remove the hardware securing the top mounting bracket (1) of the hydraulic reservoir.



FIG. 20

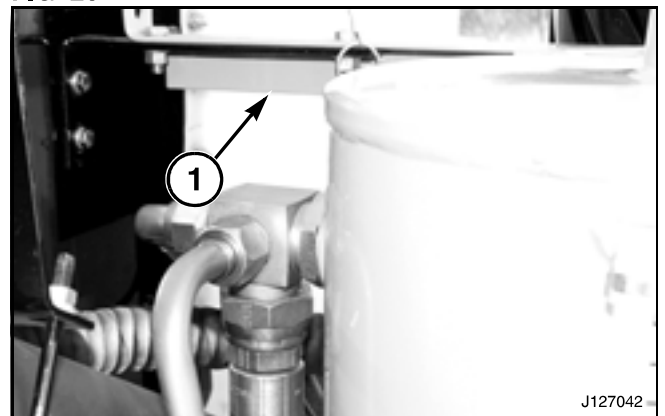


FIG. 21

Hydraulic Reservoir

FIG. 22: Remove the 12-volt accessory plug (1) from the bottom mounting bracket of the hydraulic reservoir.

Remove the two mounting bolts (2) from the bottom bracket to the engine service platform. Remove the hydraulic reservoir from the combine.

Flush the reservoir with an approved solvent and dry with clean dry compressed air.

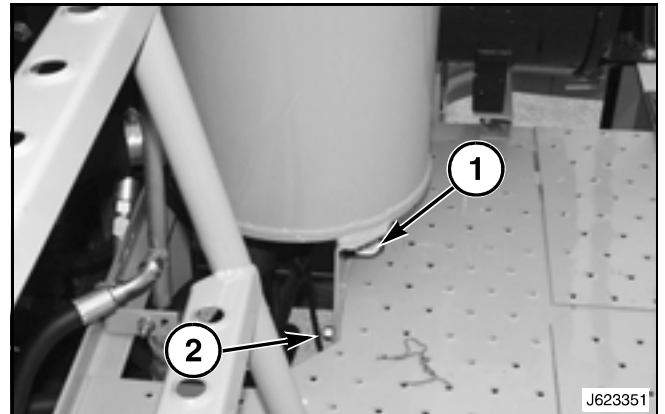


FIG. 22