

Weight Removal and Installation

FIG. 3: Use a suitable lifting device and slide each weight (1) off of the mounting bracket (2) and remove. Remove the weights until the plate (3) has been reached. Seven weights will have to be removed if the 20 weight option has been chosen. Four weights will have to be removed if the 14 weight option has been chosen.

NOTE: The weight of each plate is approximately 46 kg (102 lb).

The weights now can be removed from the opposite side.

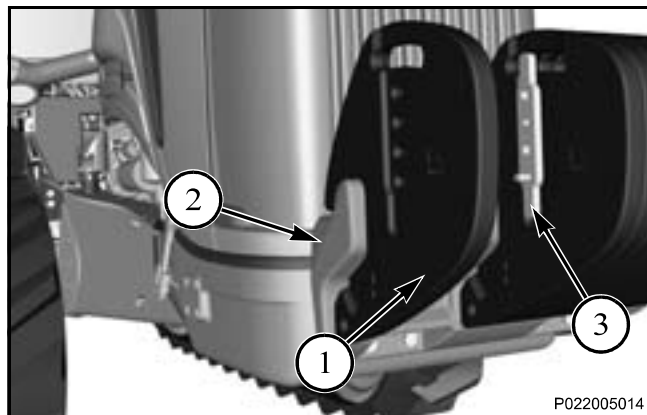


FIG. 3

FIG. 4: Loosen and remove the bolt with washer (1) that secure the weights (2).

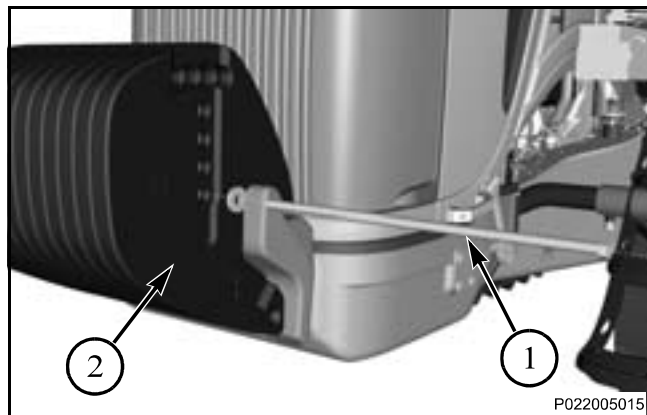


FIG. 4

FIG. 5: Use a suitable lifting device and slide each weight (1) off of the mounting bracket (2) and remove. Remove the weights until the plate (3) has been reached. Seven weights will have to be removed if the 20 weight option has been chosen. Four weights will have to be removed if the 14 weight option has been chosen.

Remove the plate.

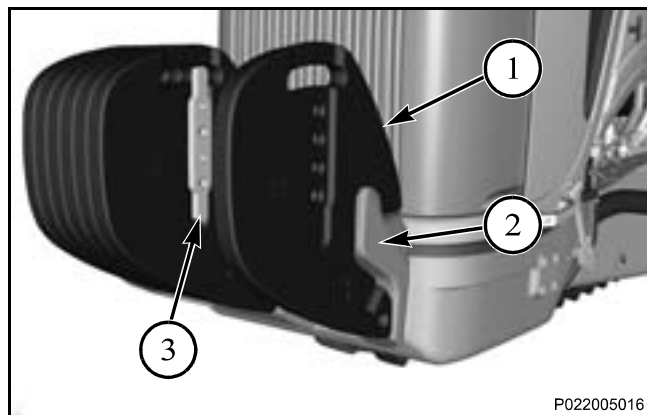


FIG. 5

FIG. 6: Remove the three weights (1) on the left-hand side of the flagpin (2).

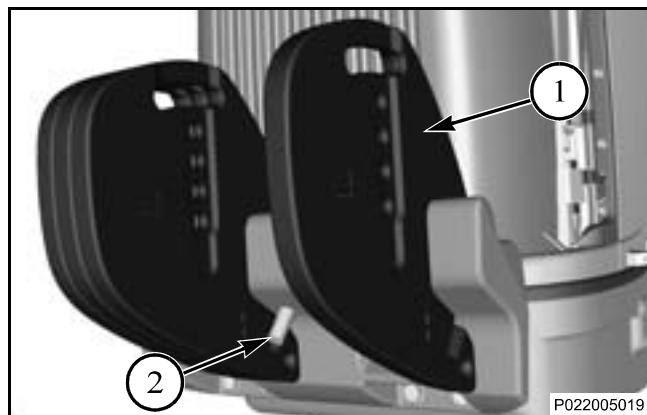


FIG. 6

Weight Removal and Installation

FIG. 7: Remove the plate (1) and three weights (2) from the right-hand side of the flagpin.

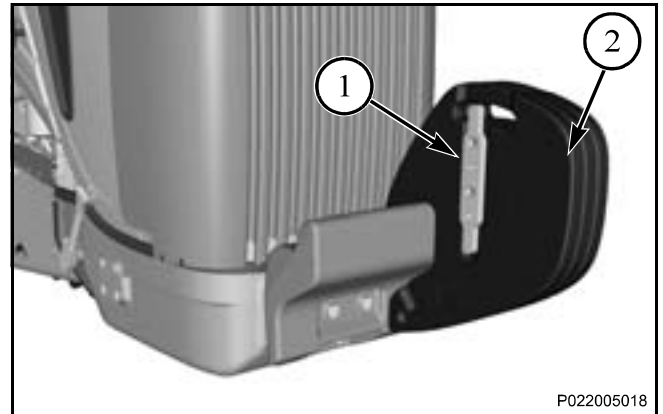


FIG. 7

FIG. 8: Remove the bolt with washer (1) that secures the flagpin.

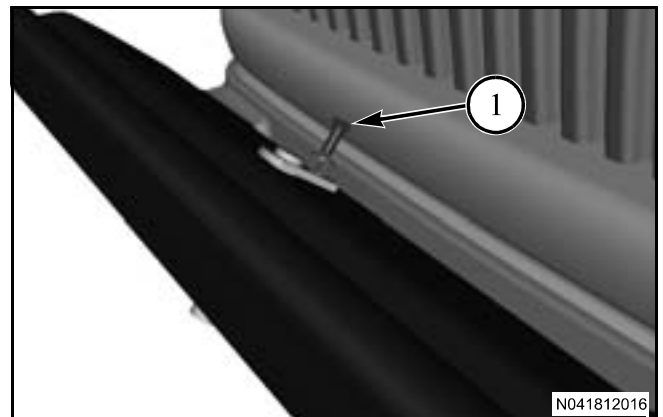


FIG. 8

FIG. 9: Remove the flagpin (1).

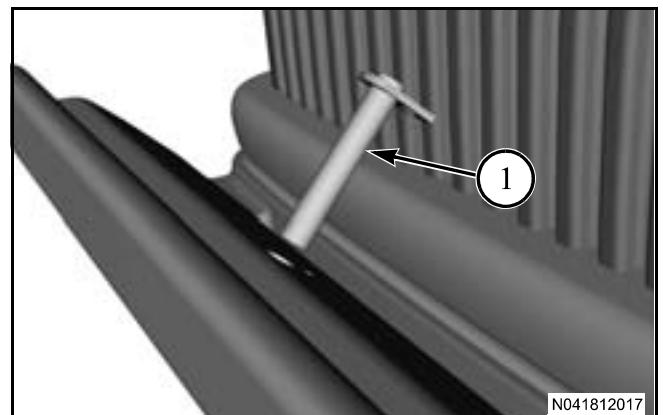


FIG. 9

FIG. 10: Use a suitable lifting device to support the mounting bracket (1).

NOTE: The weight of the mounting bracket is approximately 308 kg (679 lb).

Loosen and remove the eight bolts with washers (2) that secure the mounting bracket to the machine. Remove the mounting bracket.

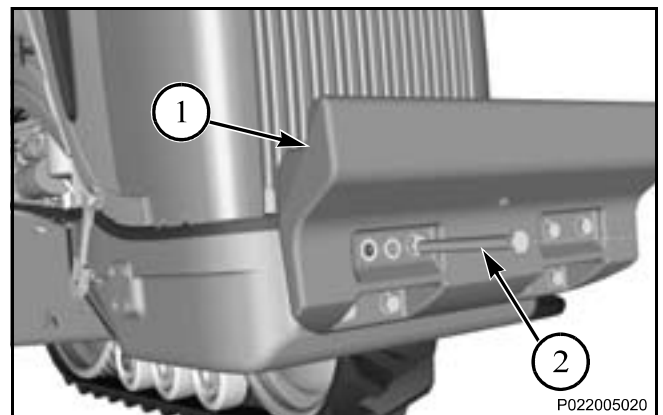


FIG. 10