


STEERING

Inspect Initial 1 000 km (600 miles) and
Every 6 000 km (4 000 miles)

Steering should be adjusted properly for smooth turning of handlebars and safe running. Overtight steering prevents smooth turning of the handlebars and too loose steering will cause the handlebars to vibrate.

Check that there is no play in the front fork assembly by supporting the motorcycle so that the front wheel is off the ground, with the wheel straight ahead, grasp the lower fork tubes near the axle and pull forward. If play is found, perform steering bearing adjustment as described in page 6-19 of this manual.

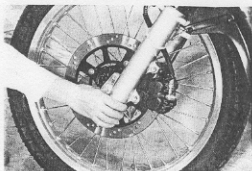

FRONT FORKS

Inspect Initial 1 000 km (600 miles) and
Every 6 000 km (4 000 miles)

Inspect the front forks for oil leakage, scoring or scratches on the outer surface of the inner tubes.
Replace any defective parts, if necessary.

REAR SUSPENSION

Inspect Initial 1 000 km (600 miles) and
Every 6 000 km (4 000 miles)











Inspect the shock absorber for oil leakage and check that there is no play in the swingarm assembly.

CHASSIS BOLTS AND NUTS

Tighten Initial 1 000 km (600 miles) and
Every 6 000 km (4 000 miles)

The nuts and bolts listed below are important safety parts. They must be retightened when necessary to the specified torque with a torque wrench. (Refer to page 2-18 for the locations of the following nuts and bolts on the motorcycle.)

Item	N-m	kg-m	lb-ft
① Steering stem head nut	60 – 100	6.0 – 10.0	43.5 – 72.5
② Front fork upper clamp bolt	20 – 30	2.0 – 3.0	14.5 – 21.5
③ Front fork lower clamp bolt	15 – 25	1.5 – 2.5	11.0 – 18.0
④ Front fork cap bolt	15 – 30	1.5 – 3.0	11.0 – 21.5
⑤ Front fork damper rod bolt	34 – 46	3.4 – 4.6	24.5 – 33.5
⑥ Front axle nut	40 – 58	4.0 – 5.8	29.0 – 42.0
⑦ Front axle pinch bolt	15 – 25	1.5 – 2.5	11.0 – 18.0
⑧ Handlebar clamp bolt	12 – 20	1.2 – 2.0	8.5 – 14.5
⑨ Front brake master cylinder mounting bolt	5 – 8	0.5 – 0.8	3.5 – 6.0
⑩ Front brake caliper mounting bolt	15 – 25	1.5 – 2.5	11.0 – 18.0
⑪ Brake hose union bolt	20 – 25	2.0 – 2.5	14.5 – 18.0
⑫ Air bleeder valve	6 – 9	0.6 – 0.9	4.5 – 6.5
⑬ Front disc mounting bolt	18 – 28	1.8 – 2.8	13.0 – 20.0
⑭ Front footrest bolt	50 – 70	5.0 – 7.0	36.0 – 50.5
⑮ Swingarm pivot nut	55 – 85	5.5 – 8.5	40.0 – 61.5
⑯ Shock absorber mounting nut (Upper & Lower)	40 – 60	4.0 – 6.0	29.0 – 43.5
⑰ Rear cushion lever mounting nut	60 – 100	6.0 – 10.0	43.5 – 72.5
⑱ Rear cushion rod nut (Upper)	100 – 120	10.0 – 12.0	72.5 – 87.0
⑲ Rear cushion rod nut (Lower)	80 – 120	8.0 – 12.0	58.0 – 87.0
⑳ Rear brake cam lever bolt	5 – 8	0.5 – 0.8	3.5 – 6.0
㉑ Rear sprocket mounting nut	50 – 70	5.0 – 7.0	36.0 – 50.5
㉒ Rear axle nut	55 – 88	5.5 – 8.8	40.0 – 63.5
㉓ Spoke nipple	4 – 5	0.4 – 0.5	3.0 – 3.5

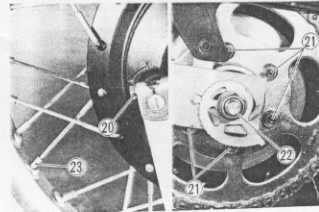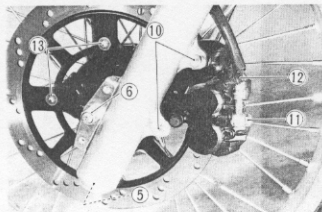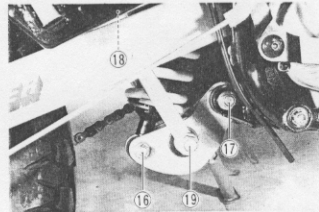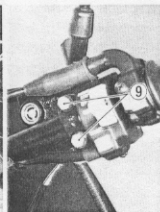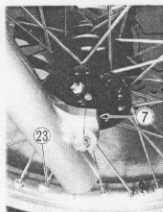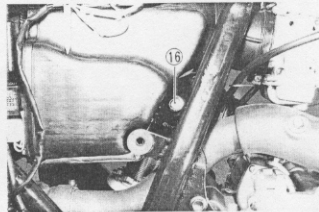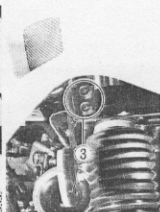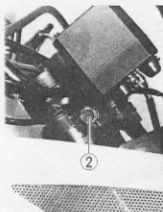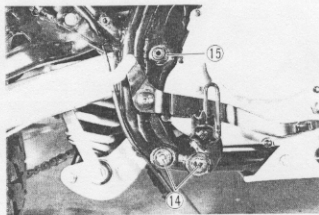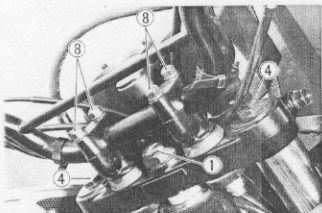

ENGINE

CONTENTS

COMPRESSION PRESSURE AND OIL PRESSURE	3- 1
ENGINE COMPONENTS REMOVABLE WITH ENGINE IN PLACE	3- 2
ENGINE REMOVAL AND REINSTALLATION	3- 3
ENGINE DISASSEMBLY	3-11
ENGINE COMPONENTS INSPECTION AND SERVICING	3-20
CYLINDER HEAD	3-20
ROCKER ARM	3-21
VALVE	3-23
CAMSHAFT	3-28
CAM DRIVE CHAIN AND BALANCER DRIVE CHAIN	3-30
CYLINDER	3-30
PISTON	3-30
PISTON RING	3-31
CONROD	3-33
CRANKSHAFT	3-33
CLUTCH	3-34
TRANSMISSION	3-37
CRANKCASE BEARINGS	3-41
ENGINE REASSEMBLY	3-42
OIL SEALS	3-42
CRANKSHAFT	3-43
BALANCERSHAFT	3-44
TRANSMISSION	3-45
GEARSHIFT	3-47
BALANCER	3-49
MAGNETO	3-51
OIL PUMP	3-52
CLUTCH	3-53
OIL FILTER	3-54
OIL SUMP FILTER	3-55
RING AND PISTON	3-55
CYLINDER AND CYLINDER HEAD	3-56
CAMSHAFT	3-59
CYLINDER HEAD COVER	3-60
CAM CHAIN TENSION ADJUSTER	3-61